



Excellence Since 1953



1WPS Pressure Switch Installation, Operation and Maintenance

Operation and Maintenance of 1WPS Compact Pressure Switch

WARNINGS:

- Incorrect use of a pressure switch may cause damage to machinery and personal injury
- Check the Series designation of the pressure switch to ensure it is being used within its design parameters
- The user must ensure that the pressure switch is installed and used in accordance with these instructions

Mounting

- The operator must ensure that the proper connections are made
- The connections must be clean and free of debris
- Use Teflon tape around the pressure switch NPT or G process threads for a tight, leak free seal
- Use the wrench flats to tighten the pressure switch into the process connection, maximum torque is 20 Nm
 - Utilizing the case or electrical outlet will damage the product

Electrical Connection

1. Loosen the screw (1)
2. Loosen the cable gland (2)
3. Pull the electrical housing (5) and the terminal block (6) away from the switch
4. Insert / slide the electrical cable through the cable gland (2), ring (3), seal (4) and housing (5)
5. Connect the cable ends to the terminal block (6) in accordance to the connection diagram (next slide)
6. Press the housing (5) onto the terminal block (6)
7. Make sure the seals are not damaged and that the cable gland and seals are correctly seated to ensure the integrity of the IP rating
8. Tighten the cable gland (2) around the cable
9. Place the flat gasket (7) over the switch's connection pins
10. Push the housing (5) and the terminal block (6) onto the switch
11. Tighten the housing screw (1)

NOTE: To avoid cross-contamination, only re-use the pressure switch if the process media is the same

Set-Point adjustment

- The 1WPS is factory-set at the mid-point of the adjustment range
- In order to change the pressure set-point setting, following these instructions
 - Insert an Allen Key (1.9mm, 3/40") through the opening on the top centre of the pressure switch
 - Turn the Allen Key clockwise to increase the pressure setting and counter-clockwise to decrease the pressure setting
 - To best determine the set-point, it is recommended to have a reference gauge available

Additional Information

Disassembly

- Before disassembly, check that the system is no longer under pressure and there is no electrical current / voltage flowing from the pressure switch

Maintenance


- The 1WPS is relatively maintenance free

Storage

- The 1WPS pressure switch should be kept in its original packaging until the time of installation
- Storage temperature range is -20 deg C to 80 deg C / -4 deg F to 176 deg F
- Protect the pressure switch from extreme humidity, dust and hot objects

Transportation

- When transporting the 1WPS, provide an optimum amount of protective packaging around the product to protect the switch from shock, vibration and sudden drops

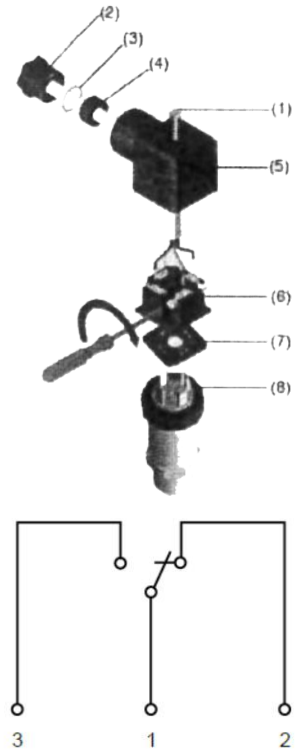

WINTERS INSTRUMENTS

MANUFACTURER OF INDUSTRIAL INSTRUMENTATION



Winters Instruments is a global manufacturer of premium quality pressure and temperature instrumentation, with distribution partners in over 90 countries. Please contact us for your nearest Regional Manager.

Corporate - Canada

Winters Instruments
121 Rainside Road
Toronto, Ontario
M3A 1B2
Tel: 416-444-2345
1-800-WINTERS
Fax: 416-444-8979
sales@winters.com

Canada - Calgary

Winters Instruments
2410D 2nd Avenue SE
Calgary, Alberta
T2E 6J9
Tel: 403-723-6645
1-800-WINTERS
Fax: 403-723-6647
calgary@winters.com

USA - Houston

Winters Instruments
5400 W. Sam Houston Pkwy N.
Houston, Texas
77041
Tel: 281-880-8607
1-800-WINTERS
Fax: 281-880-8614
usasales@winters.com

Europe - Middle East - Africa

Winters Instruments
Dubai Airport Free Zone
6WB G50
Dubai, United Arab Emirates
Tel: 971-4295-9177
Fax: 971-4295-9177
emeasales@winters.com

Asia - Shanghai

Winters Instruments
Room 203, Building 8,
No. 471, Guiping Road
Shanghai 200233 China
Tel: 86-21-6104-2610
Fax: 86-21-6104-2615
asiasales@winters.com
www.wintersasia.com

Latin America - Buenos Aires

Winters Instruments
Lamadrid 121
Los Troncos del Talar, B1608CEC
Buenos Aires, Argentina
Tel: 54-11-4715-3036
latinsales@winters.com
www.winters.com.ar

United Kingdom - Northampton

Winters Instruments
Unit, 4B Kingsfield Cl,
Northampton,
NN5 7QS
Tel: 44-0-1604-434826
emeasales@winters.com
www.winters.com



Distributed by: